



Updating the Dash Camera Software

Purpose for the update:

An issue with the dash camera's operating system.

- Rewrites corrupted memory
- Resets internal configuration states
- Re-initialises hardware drivers

Also, a way for your older Clearview camera to receive the latest software.

Step 1:

Take the micro-SD card out of the camera and place it into your PC/Laptop.
Use an adaptor if required.

Step 2:

Format the SD card. (Right-click and select "format" the SD card).

Step 3:

Copy and paste the software file. Downloaded.

FW96670A.bin

Please note the file must be copied exactly as above.

If it has another character in it, like a {1 or a .}, it won't work.

Step 4:

Place the SD card into the Front Dash Camera, then power it on.

Step 5:

If successful, there will be no sound.

The red light will be solid for around 20-30 seconds.

Then it will start up.

(Note: If it starts up normally, within 6 seconds with the welcome jingle, it has not worked.)

Try repeating the process.